

90°10'0"E

90°20'0"E

90°30'0"E

90°40'0"E

23°40'0"N

23°30'0"N

23°40'0"N


23°30'0"N

23°20'0"N


132/33 KV Grid Sub-Station of Munshiganj PBS	
Name of Grid of Sub-Station	Capacity (MVA)
Sreenagar Grid	100/150
Munshiganj Grid	160/240
Total =	260/390

33/11 KV Sub-Station of Munshiganj PBS		
Sub-Station Type	No's of Sub Station	Capacity (MVA)
Existing 33/11 KV S/S (PBS)	24 (Nos.)	450.00
Existing 33/11 KV S/S (Private)	03 (Nos.)	27.50
	Total =	477.50

33 KV Distribution Line of Munshiganj PBS		
Conductor Size	Unit	Milage (Km.)
477 MCM	KM	273.82
500 RM(UGC)	KM	2.1386
Total	KM	275.96

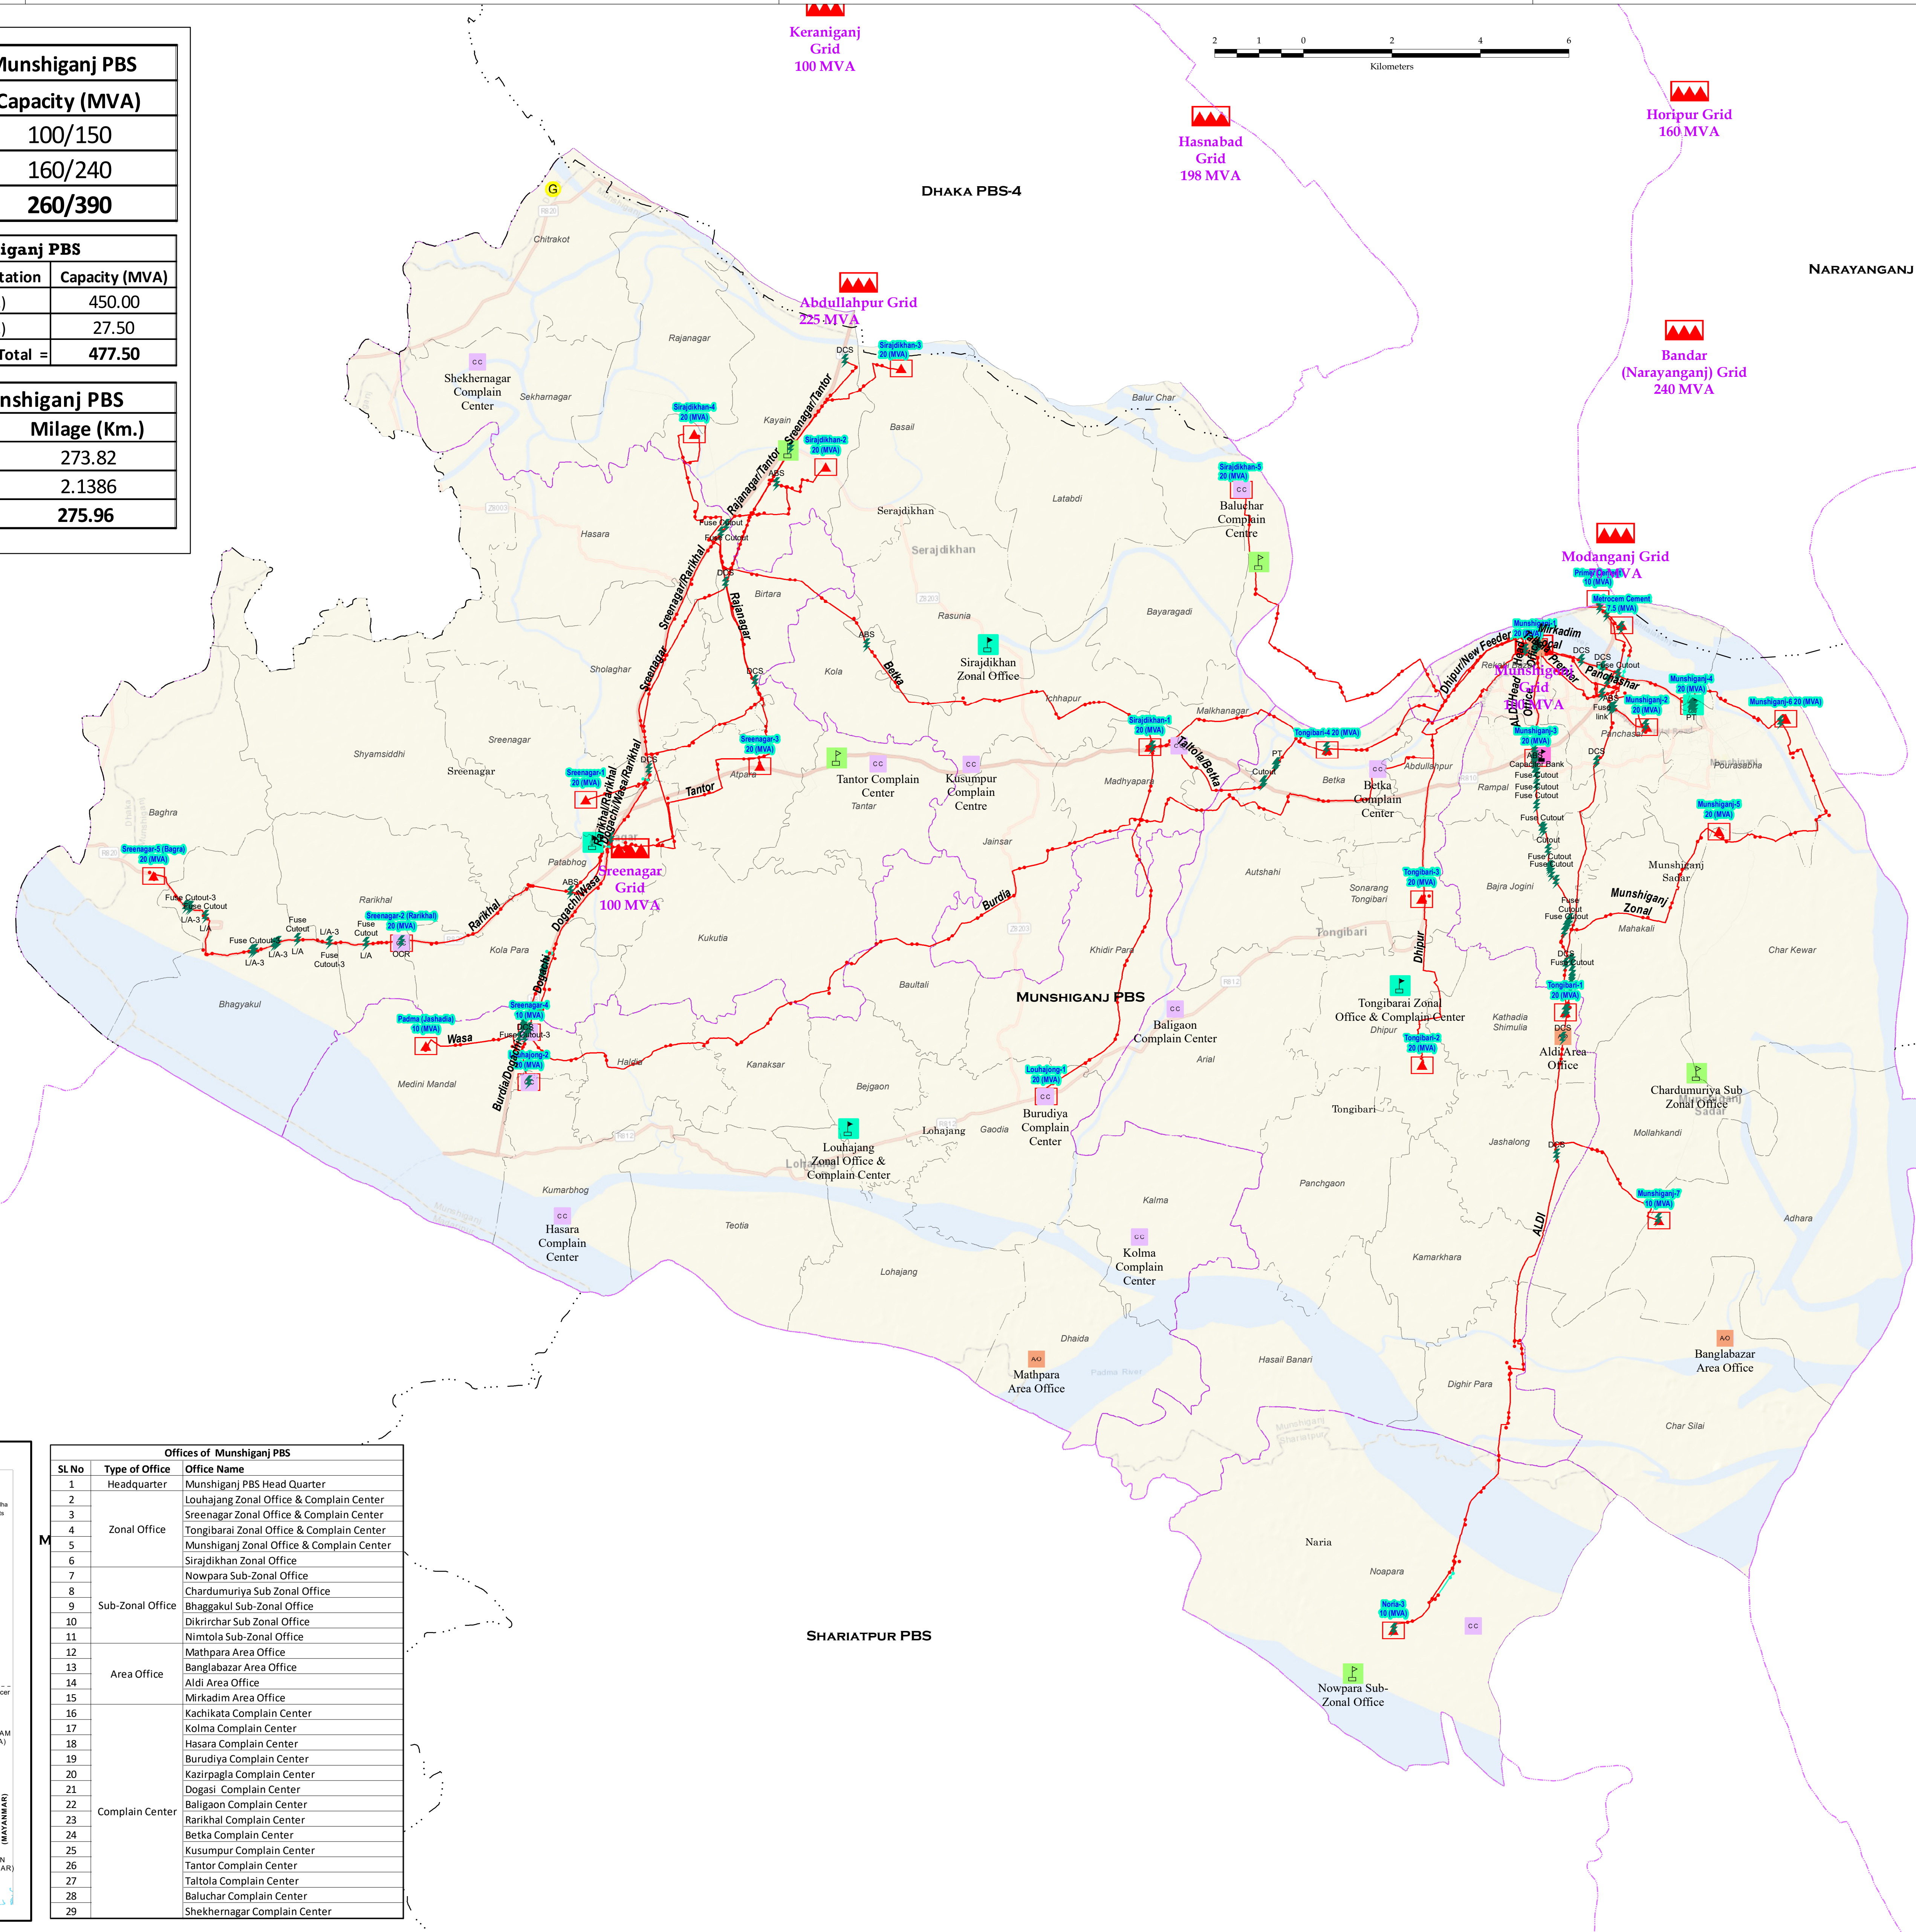

LEGEND	
International Boundary	
Zlonal Boundary	
PBS Boundary	
Upazila Boundary	
Union Boundary	
33 KV Line	
477 MCM	
500 RM	
132/33 KV Grid S/S	
Power Plant	
33/11 KV Sub-Station	
Switching Station	
Devices	
PBS Headquarter	
Zonal Office	
Sub-Zonal Office	
Area Office	
Complain Center	

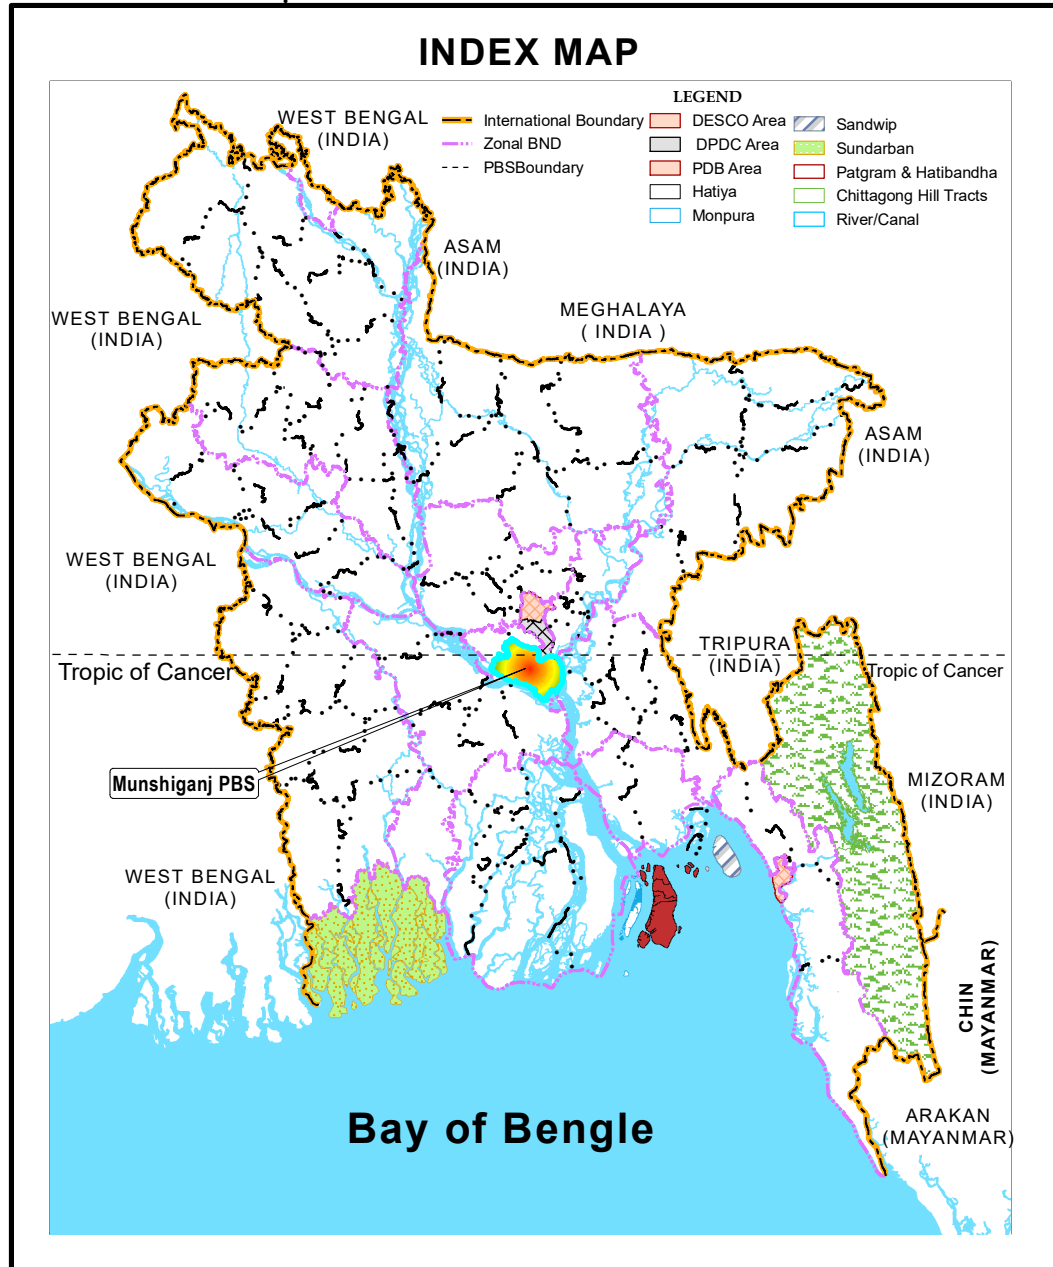

Offices of Munshiganj PBS		
SL No	Type of Office	Office Name
1	Headquarter	Munshiganj PBS Head Quarter
2		Louhajang Zonal Office & Complain Center
3		Sreenagar Zonal Office & Complain Center
4	Zonal Office	Tongibari Zonal Office & Complain Center
5		Munshiganj Zonal Office & Complain Center
6		Sirajdikhan Zonal Office
7		Nowpara Sub-Zonal Office
8		Chardumuriya Sub Zonal Office
9	Sub-Zonal Office	Bhagakul Sub-Zonal Office
10		Dikrirchar Sub Zonal Office
11		Nimtoia Sub-Zonal Office
12		Mathpara Area Office
13	Area Office	Banglabazar Area Office
14		Aldi Area Office
15		Mirkadim Area Office
16		Kachikata Complain Center
17		Kolma Complain Center
18		Hasara Complain Center
19		Burudiya Complain Center
20		Kazirpagla Complain Center
21		Dogasi Complain Center
22	Complain Center	Baligaon Complain Center
23		Rarikhal Complain Center
24		Betka Complain Center
25		Kusumpur Complain Center
26		Tantor Complain Center
27		Taltolia Complain Center
28		Baluchar Complain Center
29		Shekhernagar Complain Center